

Ordering codes

RFS



Configuration Fields								
1	2	3	4	5	6	7	8	9
RFS	5	3				5	0	0ER

1 - Model Code	
RFS Base	RFS

2 - Input	
5	TC, RTD

3 - Control Action	
3	PID + smart

4 - Output 1	
1	relay
6	SSR

5 - Output 2	
0	none
1	relay
6	SSR

6 - Options	
0	none
4	OFD + logic in
5	alm2 + OFD + logic in

7 - Power Supply	
5	24VDC

Connector KitARFSKITC0N000
 2 x 2 Pin Connector
 2 x 3 Pin Connector
 1 x 5 Pin Connector
 1 x 8 Pin Connector

Interconnecting Bus CableARFSFLAT13000
 Current Transformers
 Current Transformer 10A7ERR10000000
 Current Transformer 25A7ERR20000000
 Current Transformer 50A7ERR40000000
 Current Transformer 100A7ERR50000000

PC Configurator for RFSCPI12210000N
 RFS Alarm UnitARFSAL00000ER
 RFS User Manual CDHA136732

Text Display

4 Line Text Operator Station71-1165
 Text Display Config Software and Cable71-1166
 Cable (RFS to 4 Line Text Display)A-60222

