

## Ordering codes

### RFS



Configuration Fields								
1	2	3	4	5	6	7	8	9
RFS	5	3				5	0	0ER

1 - Model Code	
RFS Base	RFS

2 - Input	
5	TC, RTD

3 - Control Action	
3	PID + smart

4 - Output 1	
1	relay
6	SSR

5 - Output 2	
0	none
1	relay
6	SSR

6 - Options	
0	none
4	OFD + logic in
5	alm2 + OFD + logic in

7 - Power Supply	
5	24VDC


Connector Kit .....ARFSKITC0N000  
 2 x 2 Pin Connector  
 2 x 3 Pin Connector  
 1 x 5 Pin Connector  
 1 x 8 Pin Connector

Interconnecting Bus Cable .....ARFSFLAT13000  
 Current Transformers  
 Current Transformer 10A .....7ERR10000000  
 Current Transformer 25A .....7ERR20000000  
 Current Transformer 50A .....7ERR40000000  
 Current Transformer 100A .....7ERR50000000

PC Configurator for RFS .....CPI12210000N  
 RFS Alarm Unit .....ARFSAL00000ER  
 RFS User Manual CD .....HA136732

### Text Display

4 Line Text Operator Station .....71-1165  
 Text Display Config Software and Cable .....71-1166  
 Cable (RFS to 4 Line Text Display) .....A-60222

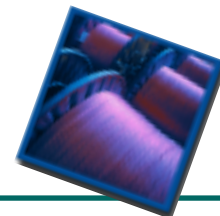

**大连爱克新仪器有限公司**

[www.eurotherm.com.cn](http://www.eurotherm.com.cn)

辽宁省大连市中山区七七街23号海鹰大厦403室 邮编：116001

电话：0411-82650498 ; 传真：0411-82650478

email: sales@eurotherm.com.cn support@eurotherm.com.cn

